



Lista de compatibilidad con teléfonos móviles

Type	Brand	Model	Voltage	Current	DC+USB+	Switching Interface	Compatible con winx-batt D14
Mobile	LG						
Phone		LG7020	3.7V			04-M5	yes
Mobile	LG						
Phone		SC9388	3.7V			04-M5	Yes
Mobile	LG						
Phone		LG6260	3.7V			04-M5	yes
Mobile	LG						
Phone		SC9288	3.7V			04-M5	yes
Mobile	LG						
Phone		LG8180	3.7V			04-M5	yes
Mobile	LG						
Phone		LG8080	3.7V			04-M5	yes
Mobile	motorola						
Phone		3690	3.7V			04-M4	yes
Mobile	motorola						
Phone		3788	3.7V			04-M4	yes
Mobile	motorola						
Phone		338	3.7V			04-M4	yes
Mobile	motorola						
Phone		308	3.7V			04-M4	yes
Mobile	motorola						
Phone		366C	3.7V			04-M4	yes
Mobile	motorola						
Phone		388C	3.7V			04-M4	yes
Mobile	motorola						
Phone		368C	3.7V			04-M4	yes
Mobile	motorola						
Phone		7789	3.7V			04-M4	yes
Mobile	motorola						
Phone		328	3.7V			04-M4	yes

Mobilemotorola Phone	7389I	3.7V	04-M4	yes
Mobilemotorola Phone	938	3.7V	04-M4	yes
Mobilemotorola Phone	M930	3.7V	04-M4	yes
Mobilemotorola Phone	M189	3.7V	04-M4	yes
Mobilemotorola Phone	998	3.7V	04-M4	yes
Mobilemotorola Phone	V868	3.7V	04-M5	yes
Mobilemotorola Phone	A760	3.7V	04-M4	yes
Mobilemotorola Phone	T720I	3.7V	04-M4	yes
Mobilemotorola Phone	T720	3.7V	04-M4	yes
Mobilemotorola Phone	I80	3.7V	04-M4	yes
Mobilemotorola Phone	T189	3.7V	04-M4	yes
Mobilemotorola Phone	M2688	3.7V	04-M4	yes
Mobilemotorola Phone	LF2000	3.7V	04-M4	yes
Mobilemotorola Phone	L2000	3.7V	04-M4	yes
Mobilemotorola Phone	A6288	3.7V	04-M4	yes
Mobilemotorola Phone	V878	3.7V	04-M5	yes
Mobilemotorola Phone	7690	3.7V	04-M4	yes

Mobilemotorola Phone	6188	3.7V	04-M4	yes
Mobilemotorola Phone	366	3.7V	04-M4	yes
Mobilemotorola Phone	388	3.7V	04-M4	yes
MobileNOKIA Phone	6220	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8850	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8910	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8210	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7200	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7210	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7250	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7110	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6230	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6225	3.7V	04- NOKIA	yes
MobileNOKIA Phone	5210	3.7V	04- NOKIA	yes
MobileNOKIA Phone	5140	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6820	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6650	3.7V	04- NOKIA	yes
MobileNOKIA	6800	3.7V	04-	yes

Phone			NOKIA	
MobileNOKIA Phone	7600	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6108	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6500	3.7V	04- NOKIA	yes
MobileNOKIA Phone	5110I	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3100	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3200	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3610	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3510	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3350	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3330	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3560	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8910I	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8250	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8810	3.7V	04- NOKIA	yes
MobileNOKIA Phone	8310	3.7V	04- NOKIA	yes
MobileNOKIA Phone	9110	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7700	3.7V	04- NOKIA	yes

MobileNOKIA Phone	6200	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6510	3.7V	04- NOKIA	yes
MobileNOKIA Phone	5510	3.7V	04- NOKIA	yes
MobileNOKIA Phone	5100	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3108	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3310	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3650	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3300	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3410	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3315	3.7V	04- NOKIA	yes
MobileNOKIA Phone	3530	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6110	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6100	3.7V	04- NOKIA	yes
MobileNOKIA Phone	6610	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7650	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7250I	3.7V	04- NOKIA	yes
MobileNOKIA Phone	7610	3.7V	04- NOKIA	yes

MobileNOKIA Phone	8855	3.7V	04- NOKIA	yes
MobileSAMSUNG Phone	A388	3.7V	04-M1	yes
MobileSAMSUNG Phone	A408	3.7V	04-M1	yes
MobileSAMSUNG Phone	A539	3.7V	04-M1	yes
MobileSAMSUNG Phone	R220	3.7V	04-M1	yes
MobileSAMSUNG Phone	N288	3.7V	04-M1	yes
MobileSAMSUNG Phone	E700	3.7V	04-M1	yes
MobileSAMSUNG Phone	X199	3.7V	04-M1	yes
MobileSAMSUNG Phone	Q200	3.7V	04-M1	yes
MobileSAMSUNG Phone	N620	3.7V	04-M1	yes
MobileSAMSUNG Phone	T208	3.7V	04-M1	yes
MobileSAMSUNG Phone	T108	3.7V	04-M1	yes
MobileSAMSUNG Phone	R210	3.7V	04-M1	yes
MobileSAMSUNG Phone	A599	3.7V	04-M1	yes
MobileSAMSUNG Phone	A400	3.7V	04-M1	yes
MobileSAMSUNG Phone	A399	3.7V	04-M1	yes
MobileSAMSUNG Phone	A300	3.7V	04-M1	yes
MobileSAMSUNG	T100	3.7V	04-M1	yes

Phone

MobileSAMSUNG Phone	N628	3.7V	04-M1	yes
MobileSAMSUNG Phone	R208	3.7V	04-M1	yes
MobileSAMSUNG Phone	A508	3.7V	04-M1	yes
MobileSAMSUNG Phone	A200	3.7V	04-M1	yes
MobileSAMSUNG Phone	A288	3.7V	04-M1	yes
MobileSiemens Phone	6088	3.7V	04-M2	yes
MobileSiemens Phone	S35	3.7V	04-M2	yes
MobileSiemens Phone	M35	3.7V	04-M2	yes
MobileSiemens Phone	C28	3.7V	04-M2	yes
MobileSiemens Phone	C55	3.7V	04-M2	yes
MobileSiemens Phone	1118	3.7V	04-M2	yes
MobileSiemens Phone	3518	3.7V	04-M2	yes
MobileSiemens Phone	3508	3.7V	04-M2	yes
MobileSiemens Phone	1168	3.7V	04-M2	yes
MobileSiemens Phone	A50	3.7V	04-M2	yes
MobileSiemens Phone	6688	3.7V	04-M2	yes
MobileSiemens Phone	3568i	3.7V	04-M2	yes

MobileSiemens Phone	358i	3.7V	04-M2	yes
MobileSiemens Phone	3508i	3.7V	04-M2	yes
MobileSiemens Phone	3118	3.7V	04-M2	yes
MobileSiemens Phone	1128	3.7V	04-M2	yes
MobileSiemens Phone	3618	3.7V	04-M2	yes
MobileSiemens Phone	3568	3.7V	04-M2	yes
MobileSiemens Phone	6688I	3.7V	04-M2	yes
MobileSiemens Phone	SL45	3.7V	04-M2	yes
MobileSiemens Phone	ME45	3.7V	04-M2	yes
MobileSiemens Phone	C45	3.7V	04-M2	yes
MobileSiemens Phone	C35	3.7V	04-M2	yes
MobileSiemens Phone	A35	3.7V	04-M2	yes
MobileSiemens Phone	6618	3.7V	04-M2	yes
MobileSiemens Phone	C2588	3.7V	04-M2	yes
MobileSiemens Phone	2118	3.7V	04-M2	yes
MobileSonyEricssonP908 Phone		3.7V	04-M3	yes
MobileSonyEricssonT102 Phone		3.7V	04-M3	yes

MobileSonyEricssonZ500 Phone	3.7V	04-M3	yes
MobileSonyEricsson300C Phone	3.7V	04-M3	yes
MobileSonyEricssonT65 Phone	3.7V	04-M3	yes
MobileSonyEricssonR380 Phone	3.7V	04-M3	yes
MobileSonyEricssonR600 Phone	3.7V	04-M3	yes
MobileSonyEricssonA3168 Phone	3.7V	04-M3	yes
MobileSonyEricssonT302 Phone	3.7V	04-M3	yes
MobileSonyEricssonT312 Phone	3.7V	04-M3	yes
MobileSonyEricssonP628 Phone	3.7V	04-M3	yes
MobileSonyEricssonP802 Phone	3.7V	04-M3	yes
MobileSonyEricssonT310 Phone	3.7V	04-M3	yes
MobileSonyEricssonT39 Phone	3.7V	04-M3	yes
MobileSonyEricssonT238 Phone	3.7V	04-M3	yes
MobileSonyEricssonT26 Phone	3.7V	04-M3	yes
MobileSonyEricssonT618 Phone	3.7V	04-M3	yes
MobileSonyEricssonR320SC Phone	3.7V	04-M3	yes
MobileSonyEricssonT600 Phone	3.7V	04-M3	yes
MobileSonyEricssonT66	3.7V	04-M3	yes

Phone

Mobile SonyEricssonT602 Phone	3.7V	04-M3	yes
Mobile SonyEricssonT202 Phone	3.7V	04-M3	yes
Mobile SonyEricssonT200 Phone	3.7V	04-M3	yes
Mobile SonyEricssonZ1010 Phone	3.7V	04-M3	yes
Mobile SonyEricssonZ608 Phone	3.7V	04-M3	yes
Mobile SonyEricssonZ208 Phone	3.7V	04-M3	yes
Mobile SonyEricssonT602 Phone	3.7V	04-M3	yes
Mobile SonyEricssonT202 Phone	3.7V	04-M3	yes
Mobile SonyEricssonT68 Phone	3.7V	04-M3	yes
Mobile SonyEricssonA2618 Phone	3.7V	04-M3	yes



Lista de compatibilidad con PDAs / Pocket PC

Type	Brand	Model	Voltage	CurrentDC+	USB+	Switching Interface	Compatible con winx-batt D14
PDA Pocket PC	Asus	N20	5V		A617		yes
PDA Pocket PC	Asus	A620	5V		A616		Yes
PDA Pocket PC	Asus	A600	5V		A615		yes
PDA Pocket PC	Blackberry	n/a	5V		A604		yes
PDA Pocket PC	Dell	X3	5V		A612		yes

PC

PDA Pocket PC	Dell	X5	5V	A611	yes
PDA Pocket PC	Ipaq	5400/5500	5V	A609	yes
PDA Pocket PC	Ipaq	3800/3900	5V	A609	yes
PDA Pocket PC	Ipaq	3130	5V	A611	yes
PDA Pocket PC	Ipaq	3600/3700	5V	A610	yes
PDA Pocket PC	Ipaq	1930/1940	5V	A609	yes
PDA Pocket PC	Ipaq	4150/4350	5V	A609	yes
PDA Pocket PC	Ipaq	2210	5V	A609	yes
PDA Pocket PC	Ipaq	1910	5V	A609	yes
PDA Pocket PC	Lenovo	ET560	5V	A604	yes
PDA Pocket PC	Mio	168/528	5V	A605	yes
PDA Pocket PC	Mio	339/558	5V	A605	yes
PDA Pocket PC	Mio	336/338	5V	A605	yes
PDA Pocket PC	MPX200	n/a	5V	A604	yes
PDA Pocket PC	Palm	Tungsten T	5V	A607	yes
PDA Pocket PC	Palm	Tungsten T3	5V	A607	yes
PDA Pocket PC	Palm	Tungsten TW	5V	A607	yes

PDA Pocket PC	Palm	Zire 71	5V	A607	yes
PDA Pocket PC	Palm	Tungsten TC 5V		A607	yes
PDA Pocket PC	Samsung	1700/1500	5V	A606	yes
PDA Pocket PC	Sony	Ux50	5V	A604	yes
PDA Pocket PC	Sony	SJ	5V	A603	yes
PDA Pocket PC	Sony	SN	5V	A602	yes
PDA Pocket PC	Sony	T	5V	A603	yes
PDA Pocket PC	Sony	TG/TH/TJ	5V	A603	yes
PDA Pocket PC	Sony	NZ90	5V	A603	yes
PDA Pocket PC	Sony	NR/NX	5V	A603	yes
PDA Pocket PC	Sony Ericsson	P900/P800	5V	A608	yes
PDA Pocket PC	Toshiba	E350	5V	A601	yes
PDA Pocket PC	Toshiba	E310	5V	A601	yes
PDA Pocket PC	Toshiba	E740	5V	A601	yes
PDA Pocket PC	Toshiba	E340	5V	A601	yes
PDA Pocket PC	Toshiba	E330	5V	A601	yes
PDA Pocket PC	XDA	O2	5V	A613	yes

PDA Pocket
PC



**Lista de
compatibilida
d con Mp3 /
Ipods / PSP /**

Type	Brand/Model	Voltage	Current	DC+	USB+	Switching Interface	Compatible con winx- batt D14
MP3/CD/MD	aigo	5V			yes		yes
MP3/CD/MD	Apple Ipod	5V			yes		yes
MP3/CD/MD	Apple Ipod mini	5V			yes		yes
MP3/CD/MD	Apple Ipod nano	5V			yes		yes
MP3/CD/MD	Apple Ipod shuffle	5V			yes		Yes
MP3/CD/MD	BenQ	5V			yes		yes
MP3/CD/MD	BES	5V			yes		yes
MP3/CD/MD	Creative	5V			yes		yes
MP3/CD/MD	DEC	5V			yes		yes
MP3/CD/MD	Founder	5V			yes		yes
MP3/CD/MD	Hyundai	5V			yes		yes
MP3/CD/MD	iRiver	5V			yes		yes
MP3/CD/MD	Lenovo	5V			yes		yes
MP3/CD/MD	LG	5V			yes		yes
MP3/CD/MD	MPIO	5V			yes		yes
MP3/CD/MD	MSC	5V			yes		yes
MP3/CD/MD	MSI	5V			yes		yes
MP3/CD/MD	Netac	5V			yes		yes
MP3/CD/MD	ONDA	5V			yes		yes
MP3/CD/MD	Sony PSP	5V			yes		yes
MP3/CD/MD	Samsung	5V			yes		yes

MP3/CD/MD	Suang	5V	yes	yes
MP3/CD/MD	TRULY	5V	yes	yes
MP3/CD/MD	Vion	5V	yes	yes
MP3/CD/MD	WeWa!!	5V	yes	yes



Lista de compatibilidad con cámaras digitales

Type	Brand	Model	Voltage	CurrentDC+*USB+*	Switching Interface	Compatible con winx-batt D14
Digital Camera	CANON	A-60	4.3V		04-C	yes
Digital Camera	CANON	A-80	4.7V		04-C	Yes
Digital Camera	CANON	A80	4.3V		04-D	yes
Digital Camera	CANON	A75	4.3V		04-D	yes
Digital Camera	CANON	A70	4.3V		04-D	yes
Digital Camera	CANON	S1	7.4V		04-B	yes
Digital Camera	CANON	S1IS	7.4V		04-B	yes
Digital Camera	CASIO	QVR51	3V		04-A	yes
Digital Camera	CASIO	S3	5.3V		04-D	yes
Digital Camera	CASIO	EX-Z40	5.3V		04-D	yes
Digital Camera	CASIO	EX-Z405	5.3V		04-D	yes
Digital Camera	CASIO	S3	5		04-D	yes
Digital	CASIO	EX-Z405	5.3V		04-D	yes

Camera

Digital Camera	CASIO	EX-Z40	5.3V	04-D	yes
Digital Camera	FUJIANFILMS5000		5V	04-D	yes
Digital Camera	FUJIANFILMS7000		5V	04-D	yes
Digital Camera	FUJIANFILMS3000		5V	04-D	yes
Digital Camera	FUJIANFILMS5000		5V	04-D	yes
Digital Camera	FUJIANFILMS3000		5V	04-D	yes
Digital Camera	Kodak	CX7530	3V	04-A	yes
Digital Camera	Kodak	CX7430	5V	04-D	yes
Digital Camera	Kodak	DX7630	5V	04-D	yes
Digital Camera	Kodak	DX3800	3V	04-A	yes
Digital Camera	Kodak	CX4200	3V	04-A	yes
Digital Camera	Kodak	DX6340	3V	04-A	yes
Digital Camera	Kodak	CX6200	5V	04-D	yes
Digital Camera	Kodak	CX7430	3V	04-A	yes
Digital Camera	Kodak	DX7440	5V	04-D	yes
Digital Camera	Kodak	LS743	5V	04-D	yes
Digital Camera	Kodak	LS443	5V	04-D	yes

Digital Camera	Kodak	DX6440	3V	04-A	yes
Digital Camera	Kodak	DX6490	5V	04-D	yes
Digital Camera	NIKON	X885	8.4V	04-E	yes
Digital Camera	NIKON	E3100	4.2V	04-E	yes
Digital Camera	NIKON	E4300	8.4V	04-E	yes
Digital Camera	NIKON	E5400	8.4V	04-E	yes
Digital Camera	NIKON	D1X	8.4V	04-E	yes
Digital Camera	NIKON	8700	8.4V	04-E	yes
Digital Camera	NIKON	5700	8.4V	04-E	yes
Digital Camera	NIKON	E2200	8.4V	04-E	yes
Digital Camera	NIKON	D2H	8.4V	04-E	yes
Digital Camera	NIKON	D100	8.4V	04-E	yes
Digital Camera	OLYMPUS	C-765	4.8V	04-B	yes
Digital Camera	OLYMPUS	U300	3.7V	04-D	yes
Digital Camera	OLYMPUS	C-460	3.4V	04-B	yes
Digital Camera	OLYMPUS	U-410	4.8V	04-B	yes
Digital Camera	OLYMPUS	C-60	4.8V	04-B	yes

Digital Camera	OLYMPUS	U-300	4.8V	04-B	yes
Digital Camera	OLYMPUS	C310	3V	04-D	yes
Digital Camera	OLYMPUS	C-5060	6.5V	04-D	yes
Digital Camera	OLYMPUS	C-360	3.4V	04-B	yes
Digital Camera	OLYMPUS	C-50	4.8V	04-B	yes
Digital Camera	OLYMPUS	C-740	4.8V	04-B	yes
Digital Camera	OLYMPUS	U-400	4.8V	04-B	yes
Digital Camera	OLYMPUS	C-8080	6.5V	04-E	yes
Digital Camera	PANASONIC	CLC50	4.8V	04-D	yes
Digital Camera	PANASONIC	CLC70	4.8V	04-D	yes
Digital Camera	PANASONIC	CLC43	4.8V	04-D	yes
Digital Camera	PANASONIC	CLC33	4.8V	04-D	yes
Digital Camera	PANASONIC	CAV50	4.8V	04-D	yes
Digital Camera	PANASONIC	CLC1	4.8V	04-D	yes
Digital Camera	PANASONIC	FZ10	4.8V	04-D	yes
Digital Camera	PANASONIC	CLV60	9V	04-G	yes
Digital Camera	PANASONIC	CAV25	4.8V	04-D	yes
Digital	PANASONIC	CAS10	4.8V	04-D	yes

Camera

Digital Camera	PENTAX	S40	3V		04-A	yes
Digital Camera	SAMSUNG	CYKER3	3.3V		04-A	yes
Digital Camera	SAMSUNG	CYKER4	3.3V		04-A	yes
Digital Camera	SAMSUNG	V4	5V		04-A	yes
Digital Camera	SAMSUNG	U-CA3	3.3V		04-A	yes
Digital Camera	SAMSUNG	300	3.3V		04-A	yes
Digital Camera	Shinco	n/a	9V		04-D	yes



Lista de compatibilidad con cámaras de video

Type	Brand	Model	Voltage	Current	DC+*USB+*	Switching Interface	Compatible con winx-batt D14
Digital Comcorder/DV	JVC	DV500EK	11V		04-C		yes
Digital Comcorder/DV	JVC	DX25EK	11V		04-C		Yes
Digital Comcorder/DV	JVC	900AA	11V		04-C		yes
Digital Comcorder/DV	PANASONIC	GS33	7.2V		04-E		yes
Digital Comcorder/DV	PANASONIC	GS50	7.2		04-E		yes
Digital Comcorder/DV	PANASONIC	GS55	7.2V		04-E		yes
Digital Comcorder/DV	PANASONIC	GS30	7.2		04-E		yes
Digital Comcorder/DV	PANASONIC	GS11	7.2V		04-E		yes

Digital Comcorder/DV	PANASONIC GS15		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC GX7		7.9V	04-E	yes
Digital Comcorder/DV	PANASONIC DS65		7.9V	04-E	yes
Digital Comcorder/DV	PANASONIC GS200		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC GS120		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC GS11		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC GS400		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC GS70		7.2V	04-E	yes
Digital Comcorder/DV	PANASONIC MX500		7.9V	04-E	yes
Digital Comcorder/DV	SHARP	VL-Z7	7.4V	04-E	yes
Digital Comcorder/DV	SHARP	Z3	7.4V	04-E	yes